



Guida inferiore
Bottom guide



POSIZIONI DELL'AMMORTIZZATORE / DAMPER'S POSITIONS

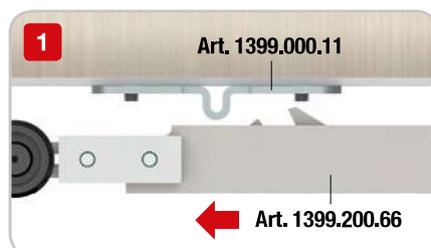

Porta aperta in fase di chiusura. Ammortizzatore carico e non attivato.
Door in closing phase. Damper loaded and to be activated yet.

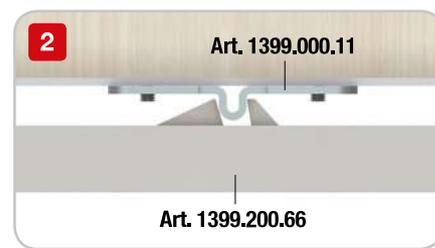

Corretta posizione dell'attivatore quando la porta è chiusa e l'ammortizzatore è scarico.
Correct activator's position when the door is closed and the damper is unloaded.

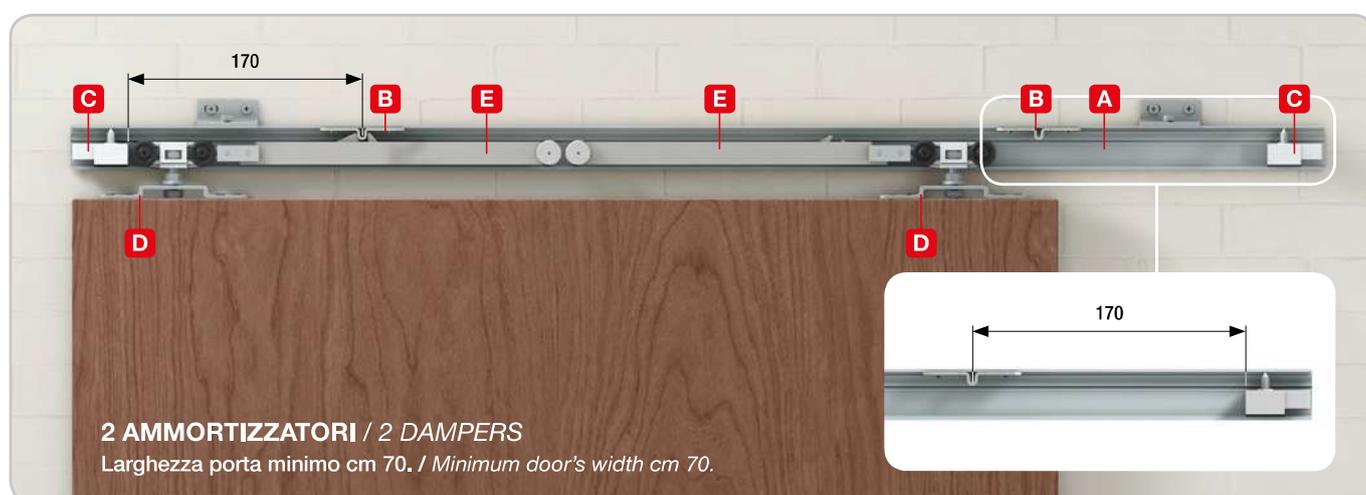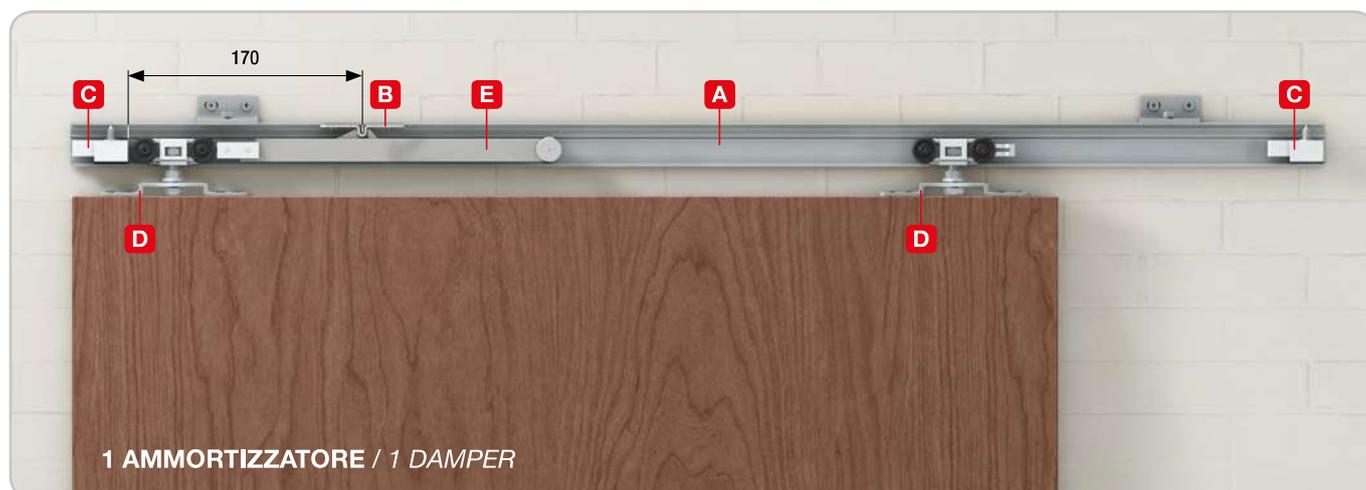

Fissare il binario **A** ed assicurarsi che sia in posizione orizzontale. Inserire i carrelli nel binario come da immagine. In caso di doppio ammortizzatore, posizionare entrambi i carrelli con l'ammortizzatore **E** rivolto verso il centro della porta. Assicurarsi che gli stessi siano carichi prima di inserirli nel binario. Inserire l'attivatore **B** e posizionarlo senza fissarlo definitivamente in vicinanza dell'estremità del binario dalla parte dove scorre il carrello con ammortizzatore **E**. Inserire i fermi **C** come da immagine, orientandoli dalla parte giusta in relazione alla presenza o meno dell'ammortizzatore. Fissare le piastre di sospensione **D** sulla porta, agganciarla ai carrelli e regolare la posizione dei fermi **C** e l'altezza della porta. Posizionare la porta al centro del binario e fissare l'attivatore **B** (o gli attivatori) a mm 170 dal fermo come da immagine. Fissare la guida in basso.

Fix the track **A** and make sure with a bubble level it is perfectly horizontal. Insert the rollers into the track as per the picture. In the event of two dampers, place both the rollers with the damper **E** pointed towards the door's centre. Make sure that the damper is loaded before inserting it into the track. Insert the activator **B** and place it for the moment close to the track's end where there is the damping action. Insert the door stops **C** into the track and make sure that the flat side is pointed towards the roller if in presence of the damper or towards the track's end if not in presence of the damper. Fix the suspension plates **D** to the door, hang it on the rollers and adjust the position of the door's stops **C**. Once the door stops are fixed, adjust the door's height and place the door in the middle of the track. Fix the activator **B** at exactly mm 170 from the door stop as per the picture. Fix the floor guide.

FISSAGGIO PROFILO DI COPERTURA E TAPPI LATERALI / COVER PROFILE AND SIDE CAPS FIXING

